


CORRECT CONNECTION

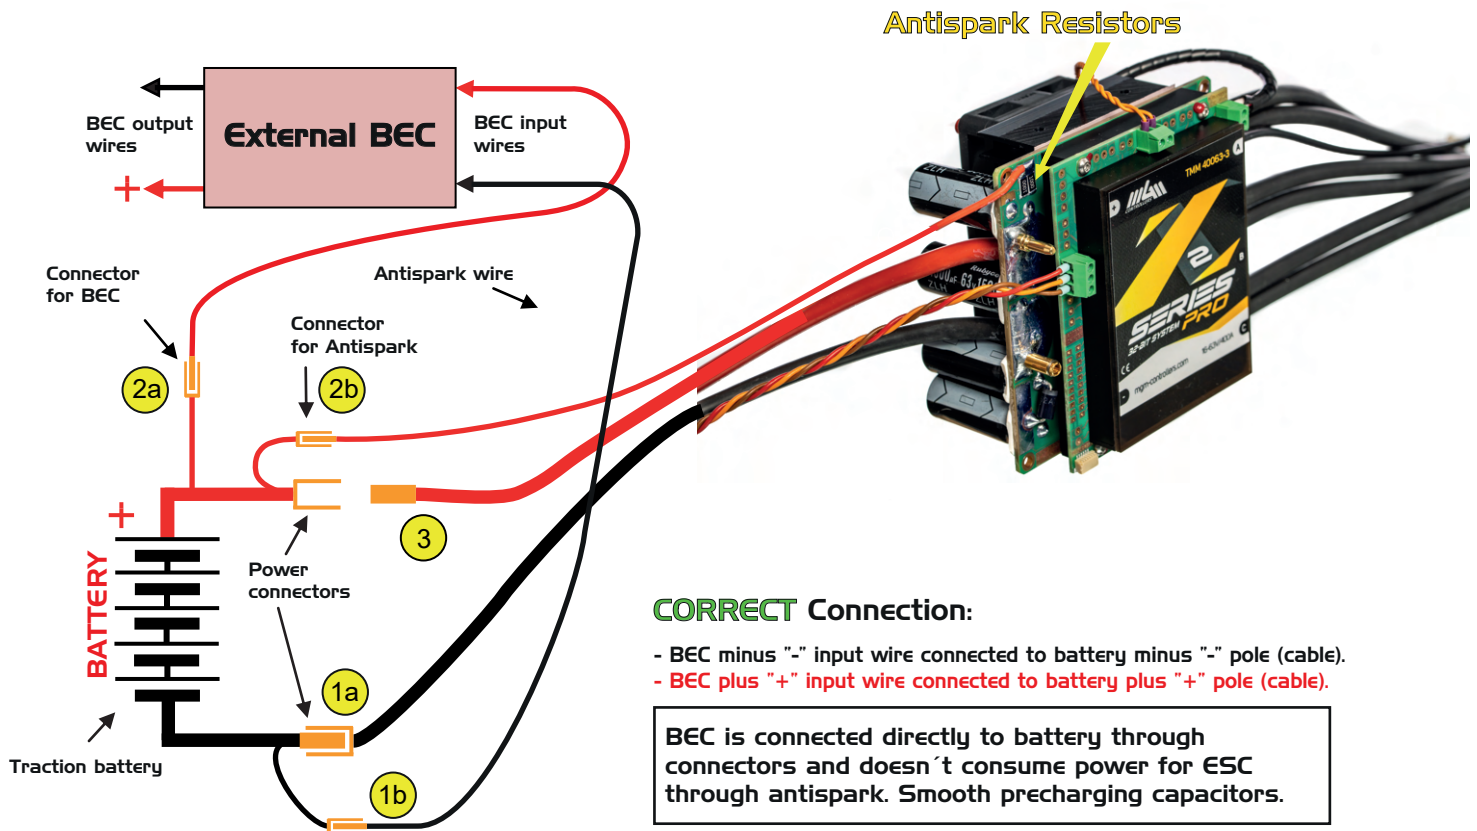

Correct procedure of connecting ESC and BEC with traction battery




In case your external BEC doesn't have integrated antispark and have capacitors, it is recommended to have additional connection with resistance for your ext. BEC.

Please, keep using short power cables as possible.

In case you are using QS8 connectors, you don't need to use separate antispark wire + connector. antispark connection is already built-in in QS8 (XT90, QS10).

!!! WARNING !!! INCORRECT !!!

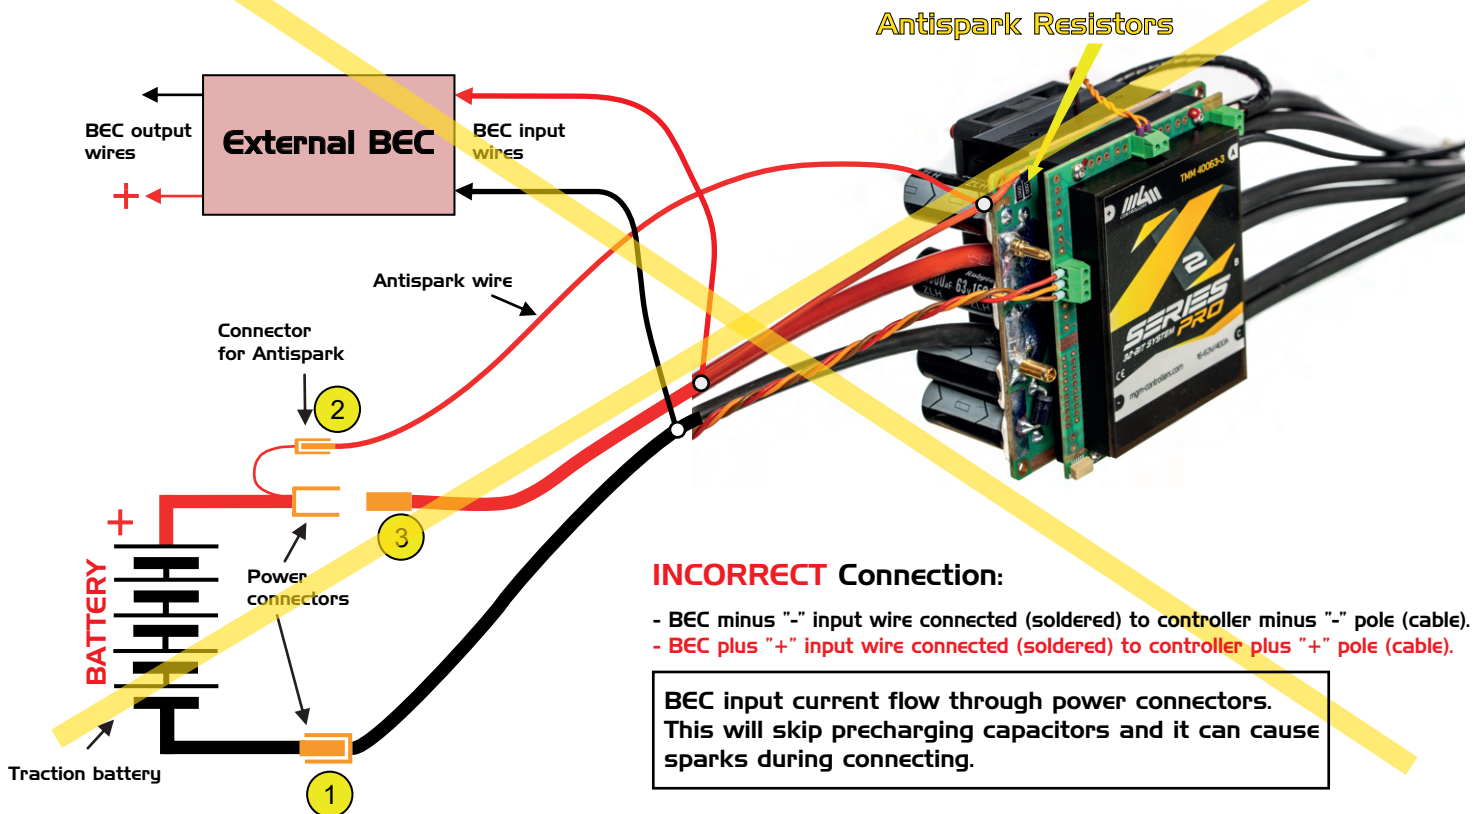

!!! WARNING !!! INCORRECT !!!

